

 
FRONT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Origaudio

© 2023 Forty Four Group, LLC, d/b/a Origaudio
Made in China

mag5000

Tech Specs:

1. Battery Capacity: 5000mAh
2. USB-A Output: DC5V/2.4A
3. Micro USB Input: DC5V/2A
4. Type-C Input: DC5V/2.4A
5. Type-C Output: DC5V/2.4A
6. Wireless Output: 5W
7. Made from Recycled ABS

What's Included:

1. 1 x 5000 mAh wireless power bank
2. 1 x USB-C cable
3. Adhesive metal ring

Power On:

1. Press the power button to turn on the power bank.
2. To activate the wireless charge function hold the power button for two seconds and place wireless charging capable phone on the wireless charging area of the power bank.

BACK

Charging the power bank:

- Charge the power bank before first usage
- Connect the provided charging cable to a suitable power source and the Type C port on the power bank (3)

Once the power bank is connected to power, the LED indicator will begin to flash and once fully charged the LED will turn solid.

Charging mobile phones and other electronics:

- Connect the charging cable to your mobile phone/device using the appropriate connector. Connect the USB or Type-C end of the cable to the appropriate port on the power bank. The LED will illuminate when it is charging the device.
- Remove the cable from your phone/device once it is fully charged.

Wireless charging function:

Press the power button to turn on the power bank. To activate the wireless charge function hold the power button for two seconds and place the power bank on the wireless charging area on compatible devices. Compatible phones will begin to charge automatically, wireless charging LED will turn off when device is fully charged.

****Note** In order for the wireless charge function to work the power bank must be connected to a wireless charging capable phone, have no object between the device and the charging surface that could interfere with charging, and must have the wireless charge function turned on as outlined above. The provided metal ring with adhesive backing can be adhered to back of phone or case to ensure a strong connection to the power bank.

Safety Precautions:

WARNING-When using this power bank, basic precautions should always be followed:

- Read instructions before use
- Never store power bank in temperatures below 32F(0C) or above 104F(40C)
- Do not over charge devices with power bank. The power bank may become hot with excessive use
- Do not expose the power bank to moisture or extreme heat
- When charging, the power bank may feel warm, this is a normal operating condition and should not be cause for concern
- When charging the power bank, use only with the charging cable provided to avoid risk of fire or injury
- Do not use if the power bank is damaged or modified
- Do not disassemble the power bank
- Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons
- Switch the power bank off when not in use
- Do not dispose of product in heat or fire
- To reduce risk of injury, close supervision is necessary when power bank is used near or by children
- Attachments on the back of your phone or some phone cases can impede the effectiveness of the wireless charger and can lead to overheating. Please remove attachments before wirelessly charging
- Recycle according to local recycling and environmental regulations