

FRONT

1

Dirt Bin

2

Filter

3

ON/OFF Switch

4

Charging Port

TECH SPECS

Function: Battery powered
Battery Capacity: 1800*2 mAh
Power: 50W
Suction power: About 4000 pa
Dust cover capacity: 100ml
Working time: about 15 mins
Charging time: about 3.5 hours

WHATS IN THE BOX

1x Handheld vacuum
1x Filter (Installed in vacuum)
1x Brush attachment
1x Charging cable
1x Instruction manual

Responsible Party: Handstands Promo LLC
Company Name: HPG Brands
Address: 1770 S 5350 W Salt Lake City, UT 84104 USA
Tel: (801) 727-1400
<https://hpgbrands.com/handstands/>

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

VAVA
VROOM

Handheld Vacuum

Manual

1

2

3

4

BACK

CHARGING THE BATTERY

Insert the included charging cable into the charging port on the vacuum cleaner.

Connect the USB end of the charging cable to an appropriate adapter and then into a wall outlet.

Charge the vacuum completely for about 3.5 hours prior to first use.

*When the charging LED indicator is red, the vacuum is charging. When it turns blue, charging is complete.

USING THE VACUUM

Unplug the machine from the charging adapter.

Ensure filter is installed correctly and there are no obstructions at the opening of the vacuum.


Press the power button to turn ON.

USING THE BRUSH ATTACHMENT

Make sure the vacuum is turned OFF.


Secure the included brush attachment to the nozzle of the hand vacuum.

Once securely attached, turn the vacuum ON.

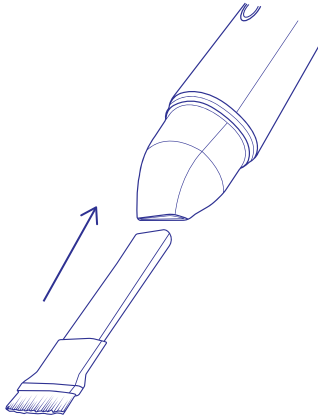


EMPTYING THE DIRT BIN

Twist the dirt bin to remove from the base.

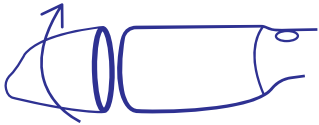

Remove the filter by pulling up from the dirt bin. Empty the dirt into a waste container.



When finished emptying the dirt, reassemble the vacuum.

After heavy use, clean the filter and dirt bin by washing gently by hand in warm water and mild dish detergent. Rinse thoroughly and make certain it is completely dry before reinserting it.

SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

-Do not use outdoors or on wet surfaces
-Do not allow appliance to be used as a toy. Close attention is necessary when used near children
-Do not use for any purpose other than described in this manual. Use only the recommended attachments.
-Do not use with damaged plug or components
-Do not use with any opening blocked
-Do not charge outdoors
-Do not incinerate the appliance
-Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
-Do not use to pick up combustible or flammable material
-Do not use to pick up toxic material
-Do not use to pick up hard or sharp objects
-Do not use without filter in place
-Do not expose to excessive temperatures
-Use only on dry surfaces
-Follow all operating and charging instructions

TO REDUCE RISK OF ELECTRIC SHOCK, TURN POWER SWITCH OFF AND DISCONNECT CHARGING CABLE BEFORE PERFORMING MAINTENANCE OR TROUBLESHOOTING CHECKS