Front

Wireless Power Bank

Congratulations on your purchase of this power bank with wireless charging. To ensure a long service life and optimal functionality of the product we recommend that you read this manual carefully.

Package Content:

1 Power bank 1 USB Cable Carried with Body 1 User Manual

Specifications:

Capacity: 5000mAh/3.7V Input: DC 5.0/2A Output: DC 5.0V/2.4A (USB Port) Wireless Output: 5.0V/1.0A 5 watt

First Time Use:

First make sure that the product is intact and there is no visable damage to the product. Before using the power bank for the first time, charge the unit completely. We recommend devices with a "2A output", then the charging time is about 2-3 hours.

Wireless Charging at Home/Office

Connect the device to the power outlet using the micro USB or Type-C cable attached to the PC, laptop, or USB adapter. The LEDs will light up during the charging process. As long as one or more LEDs are flashing, the charging process has not yet been completed. If all LEDs are lit continuously, the charger is fully charged. Make sure the device is secure and cannot wobble or fall down. Place your mobile phone (or other device) on the transfer surface. Please, see the sketch:



Battery Indication:

The LED indication shows the current battery status. Press the button to see how much battery is remaining: 1 LED < 25%

 2 LEDs
 < 50%</td>

 3 LEDs
 < 75%</td>

 4 LEDs
 < 100%</td>

 If 1 LED is flashing, the battery status is less than 10%. Please recharge the power bank.

Power Bank Function (Wireless and by Cable):

You can use this charger also as a power bank. Place your mobile phone on the charger as shown above. Press and release the button for starting charging procedure. To stop the charging function, press the button again twice or simply remove the mobile phone. Make sure the device is correctly located on the wireless charger. See the following illustrations as it is correct (check mark) and false (cross).



Note: In case your mobile phone does not support wireless charging, please connect it to the USB output of the charger by using the original cable.

Back

Recharging:

Connect the charger to the USB port of computer, laptop or USB adaptor b or Type-C cable. While charging, all LEDs are ON. If there are one or some LE charging is not complete. When the charger is fully charged, all LEDs are illu Safety Instructions:

- Warning: When using this product, basic precautions should always
- Read instructions before use.
- Never store product in temperatures below 32°F (0°C) or above 104°F
- Do not over charge your device with the power bank. The power ban with excessive use.
- Do not expose the power bank to moisture or extreme heat.
- When charging, the power bank may feel warm, this is a normal oper should not be cause for concern.
- To avoid risk of fire or injury, only use the charging cable provided to bank.
- Do not use the power bank if damaged or modifed.
- Do not disassemble the power bank.
- Do not use the power bank in excess of its output rating. Overload ou may result in a risk of fire or injury to persons.
- Switch off the power bank when not in use.
- Do not dispose of power bank in heat or fire.
- To reduce the risk of injury, close supervision is necessary when powe or by children.

Since this is a dual product, attachments on the back of your phone or som impede the effectiveness of the wireless charger and can lead to overheatin attachments before wireless charging.

To avoid risk of fire or injury, do not continuously charge other devices while charging the power bank for a long period of time.

DISPOSAL INFORMATION FOR USER:

Recycle according to local recycling and environmental regulations.

y using the Micro USB EDs flashing, the uminated constantly.	FCC Caution Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital
be followed.	device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,
F (40°C). nk may become hot	uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of
rating condition and	the following measures:
charge the power	 Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.
utputs above rating	RF Exposure: A distance of 15 cm shall be maintained between the antenna and users, and the transmitter may not be co-located with any other transmitter or antenna.
er bank is used near	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
ne phone cases can ng. Remove	

2024 Fourty Four Group, LLC, d/b/a Origaudio HPG Brands 1770 S 5350 W STE 100 Salt Lake City, UT 84104 (801) 727 - 1400 www.hpgbrands.com/origaudio