 


Power Bank Instruction Manual

Please read the following carefully before using the device to ensure safe and proper usage.

Package Content:

1 Power Bank
1 USB-C to USB-C Cable
1 User Manual

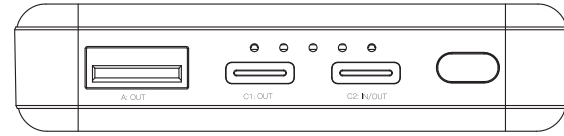

Specifications:

Capacity: 10000mAh/3.7V
Input (USB-C2): 5V=3A, 9V=2A, 12V=1.5A
Output: total 22.5W max
USB-C1: 5V=3A, 9V=2A, 12V=1.5A
USB-C2: 5V=2.4A, 9V=2.22A, 12V=1.67A
USB-A: 5V=3A, 9V=2A, 12V=1.5A
USB-C1/C2+USB-A: 5V=3A

 
Charging Your Device Using Your Power Bank:

Important: Before using, fully charge your power bank until all four status LED indicators remain illuminated.

Connect the supplied USB Cable (or the cable that came with your device) to the power bank's USB port and to your device. It will begin to charge upon connection.

When charging your device with a full power bank, all four LED indicators will be illuminated. The LED indicators will shut off one by one as your device receives power. When the power bank is low in power, only one flashing LED will be illuminated until all power has been drained.

The green LED indicates fast charging mode.

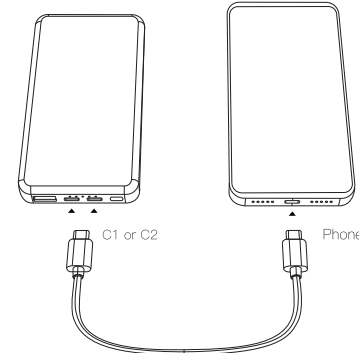

Checking Your Power Bank Battery Charging Status

Briefly press the button on your power bank and the status LEDs will indicate its charge level. Four LEDs means that the power bank battery is fully charged, while one LED means that it's almost empty. Know before you go!

1 LED < 25%
2 LEDs < 50%
3 LEDs < 75%
4 LEDs < 100%

If you don't see any LEDs the battery status is less than 10%. Please recharge the power bank.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

 
2024 Fourty Four Group, LLC, d/b/a Origaudio
HPG Brands
1770 S 5350 W STE 100 Salt Lake City, UT 84104
(801) 727 - 1400
www.hpgbrands.com/origaudio

Recharging Your Power Bank:

To recharge your power bank, use the supplied USB cable to connect its USB-C2 port to a USB wall charging adapter. While recharging the power bank, the LEDs will light up. If there is only one LED flashing, the charging is not complete. Once the power bank is fully charged, all LEDs are illuminated.

The Green LED indicates fast charging mode.

Note: For best results, do not connect the power bank to a computer's USB port. We recommend using a wall charging adapter that supports fast charging protocols such as QC or PD.

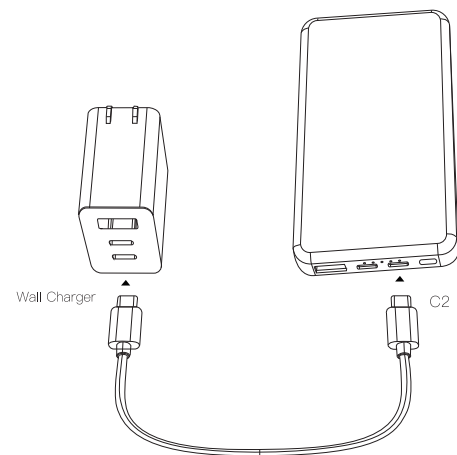

Important Safety Instructions

Safety Instructions:

- Warning: When using this product, basic precautions should always be followed.
- Read instructions before use.
- Never store product in temperatures below 32°F (0°C) or above 104°F (40°C).
- Do not over charge your device with the power bank. The power bank may become hot with excessive use.
- Do not expose the power bank to moisture or extreme heat.
- When charging, the power bank may feel warm, this is a normal operating condition and should not be cause for concern.
- To avoid risk of fire or injury, only use the charging cable provided to charge the power bank.
- Do not use the power bank if damaged or modified.
- Do not disassemble the power bank.
- Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- Switch off the power bank when not in use.
- Do not dispose of power bank in heat or fire.
- To reduce the risk of injury, close supervision is necessary when power bank is used near or by children.

For dual products, wireless charger with power bank - Attachments on the back of your phone or some phone cases can impede the effectiveness of the wireless charger and can lead to overheating. Remove attachments before wireless charging.

For pass through technology - To avoid risk of fire or injury, do not continuously charge other devices while charging the power bank for a long period of time.

DISPOSAL INFORMATION FOR USER:

Recycle according to local recycling and environmental regulations.