

FRONT

INSTRUCTION MANUAL

BACK

Wireless Charging Element



Input: DC5.0V/2.0A, 9.0V/1.67A
 Output: 5W/7.5W/10W
 Operation Frequency: 113.3-188.6kHz
 Transmission Distance: 0-50mm (3mm optimal)
 Efficiency: ≥ 75%
 H-field strength: $0.3309\mu A/m$ (1cm distance)
 Environment temperature: 0-45°C

Instruction Manual

AIR HUG
 WIRELESS CHARGING PHONE DOCK

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

AIR DOCK Setup

FIRST TIME NEW PHONE SETUP


- 1 Remove plastic liner from air dock.
- 2 Press and hold green button down to unlock grip arms.
- 3 Insert phone by pressing one of the arms to open it to the size of your phone.
- 4 Release the green button to lock the arms to phone's size.

REPEAT STEPS ONLY IF SETTING UP A NEW PHONE


AIR DOCK Instructions

EVERYDAY USE INSTRUCTIONS

Phone Inserts Easily
 locks in automatically

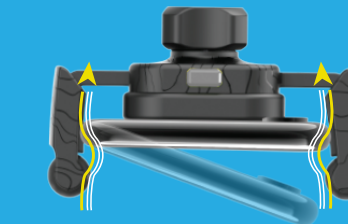

Simply Pull Phone to Remove
 no re-adjustment required

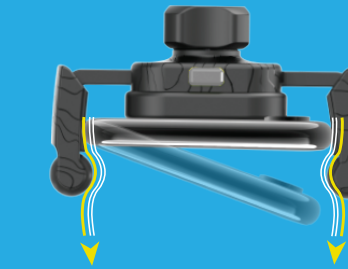

AIR CORE Instructions

12V adapter not included



- 1 Connect USB cord to powered USB port or 12V adapter. Air Core will briefly flash red to indicate it is ready to charge.



- 2 If Air Core continuously flashes red it is indicating that a metallic object is blocking charging or that the phone is not centered over the charger.



- 3 Air Core will briefly flash blue to indicate your device is charging.

VENT Instructions

- 1 Place locking nut over ball mount. With larger opening facing outwards.
- 2 Snap Air Dock onto ball mount.
- 3 Using tabs on base, twist 90 degrees or until perpendicular to vent blades.
- 4 BACK SIDE OF VENT: Make sure paddles clear the back of the first row of vent blades.
- 5 If they do not clear, try extending the paddle replacing with LARGE tab insert.
- 6 Secure mount in place by spinning mount head clockwise until tight and foam is fully compressed. Do not over-tighten.
- 7 Place locking nut over ball mount. With larger opening facing outwards.
- 8 Snap Air Dock onto ball mount.
- 9 Thread nut onto mount loosely.
- 10 Adjust Air Dock to preferred viewing angle. 360° view
- 11 Tighten locking nut firmly.