

Front

Back

PONTUNEZ - FLOATING WIRELESS SPEAKER


INSTRUCTION MANUAL

TECH SPECS:

BATTERY:	3.7V/2000MAH	MAX OUTPUT POWER:	5W
INPUT:	5V/1A	CHARGING TIME:	APPROX. 3 HOURS
PLAYTIME:	APPROX. 9 HOURS	WATER RESISTANCE:	IPX7

*VARIES BY AUDIO VOLUME AND LIGHT BRIGHTNESS

BUTTON OVERVIEW:

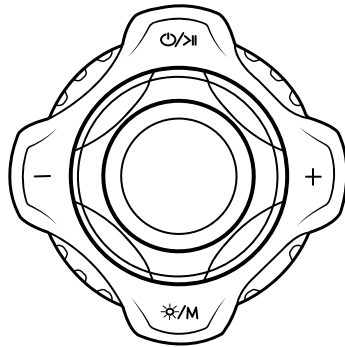

	POWER ON/OFF
	PLAY/PAUSE SONG
	NEXT SONG/VOLUME UP
	PREVIOUS SONG/VOLUME DOWN
	LED LIGHT FUNCTION
	AUDIO MODE

CONNECTING A DEVICE:

1. PRESS THE POWER BUTTON (⏻) FOR APPROX. 2 SECONDS TO TURN THE SPEAKER ON.
2. ON YOUR WIRELESS CONNECTION ENABLED DEVICE SELECT "PONTUNEZ" FROM LIST.
3. ONCE YOU HEAR THE VOICE PROMPT "CONNECTED" YOUR DEVICE HAS SUCCESSFULLY CONNECTED TO THE SPEAKER.

USING THE SPEAKER:

AUDIO CAN BE ADJUSTED FROM THE BUTTONS ON TOP OF THE SPEAKER OR DIRECTLY FROM YOUR DEVICE.

WHEN USING THE BUTTONS ON TOP OF THE SPEAKER:

	SINGLE PRESS = VOLUME UP PRESS AND HOLD = NEXT SONG
	SINGLE PRESS = VOLUME DOWN PRESS AND HOLD = PREVIOUS SONG
	PRESS ONCE TO SWITCH THE LED LIGHT MODES. (FOUR MODES) PRESS AND HOLD FOR 2 SECONDS TO TURN THE LED LIGHTS ON/OFF
	PRESS FOR APPROX. 2 SECONDS = TURN SPEAKER ON/OFF
	PRESS ONCE TO PLAY/PAUSE THE MUSIC PRESS ONCE TO ANSWER OR END CALLS PRESS TWICE TO DISCONNECT YOUR DEVICE AND REJECT INCOMING CALLS

Origaudio

BATTERY:

ALWAYS KEEP THE CHARGING INPUT PORT SEALED WHEN USING THE SPEAKER NEAR WATER.

IT IS RECOMMENDED TO CHARGE THE SPEAKER TO 100% BEFORE EACH USE TO ACHIEVE THE LONGEST PLAYTIME.

TO CHARGE, CONNECT THE INCLUDED USB-C CHARGING CABLE TO THE USB-C PORT ON THE SIDE OF THE SPEAKER. CONNECT THE OTHER END TO A SUITABLE USB 5V ADAPTER.

THE LIGHT ON THE TOP OF THE SPEAKER WILL ILLUMINATE RED WHILE THE SPEAKER IS CHARGING. ONCE FULLY CHARGED, THE LIGHT WILL TURN OFF.

RECHARGE TIME: ABOUT 3 HRS.

THE SPEAKER WILL AUTOMATICALLY SHUT DOWN AFTER 10 MIN IF THERE IS NO DEVICE CONNECTED.

WHEN THE SPEAKER HAS LOW POWER, IT WILL ALERT THE USER WITH A TONE EVERY 30 SECONDS TO INDICATE IT NEEDS TO BE RECHARGED.

TROUBLESHOOTING:

IF THE SPEAKER DOES NOT SHOW UP IN YOUR DEVICES AVAILABLE WIRELESS CONNECTION MENU, TRY:


- TURNING THE DEVICE'S WIRELESS CONNECTION OFF, WAIT 15 SECONDS, THEN TURN IT BACK ON
- TURN THE SPEAKER OFF, WAIT 15 SECONDS, THEN TURN IT BACK ON
- "FORGET" (SPEAKER NAME) FROM ALL OTHER NEARBY WIRELESS DEVICE MENUS

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC CAUTION: ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

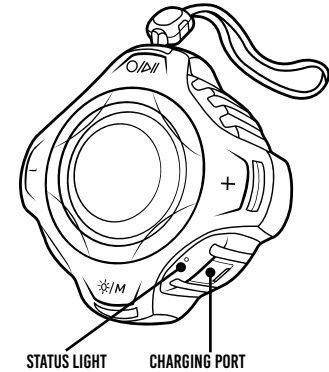

2025 Fourty Four Group, LLC, d/b/a Origaudio
HPG Brands
1770 S 5350 W STE 100 Salt Lake City, UT 84104 USA
(801) 727 - 1400
www.hpgbrands.com/origaudio